

EDIT ALL MENU

The "EDIT ALL MENU" contains a selection of sub menus and parameters for custom applications by the user. Changes to these settings must be carried **out after a FAST SET PROGRAM** has been entered **not before**

To Enter the "EDIT ALL" menu

1. Press and hold all 3 buttons on the front of the enclosure until the panel flashes once then release
2. Press the enclosure **DOWN** button twice (x2), **EDIT ALL** will be displayed on the screen
3. A steady press of the **SELECT** button will begin an advancement through the menu
4. Use the **UP** and **DOWN** buttons on the enclosure front cover to change any values followed by **SELECT** to store the value and move on through the menu

