



Haul Chain Position

When the operator has been mounted in the required position, the hand chain can be altered to suit the handing of the door.

The four brake housing screws must be loosened and the brake housing rotated until the haul chain is in the correct position, ie hanging down.

Normal operation

Opening the door is by manual haul chain operation only
Closing the door either user manual haulchain or by pulling the RED manual brake release cord

Fire Condition

Closure of the door is carried out by activation of brake release solenoid unit (e.g. PP100A) mounted to the top of the operator and activated by 24V DC

| Operator Reference | No of Phases | Volts (V) | Freq (Hz) | Watts (W) | Amps (A) | Speed (RPM) | Torque (Nm) | Rating (min) |
|--------------------|--------------|-----------|-----------|-----------|----------|-------------|-------------|--------------|
| JM500 | N/A | N/A | N/A | N/A | N/A | N/A | 62 | N/A |

This drawing is the property of ELLARD LTD, it may not be reproduced without the written authorization of Ellard Limited. All intellectual property rights are expressly reserved



Roundthorne Industrial Estate
Ellard House, Floats Road
Wythenshawe, Manchester
M23 9WB
Tel: 0161 945 4561, e-mail: technical@ellard.co.uk

Title

JM500SD (MANUAL OPERATOR)
GENERAL ARRANGEMENT (1)

Rev/Notes

Date

01/07/2021

Drawn by

DE

Chk'd by

AP

Drg #

JM500 (Manual Operator)
- General Arr (1)