


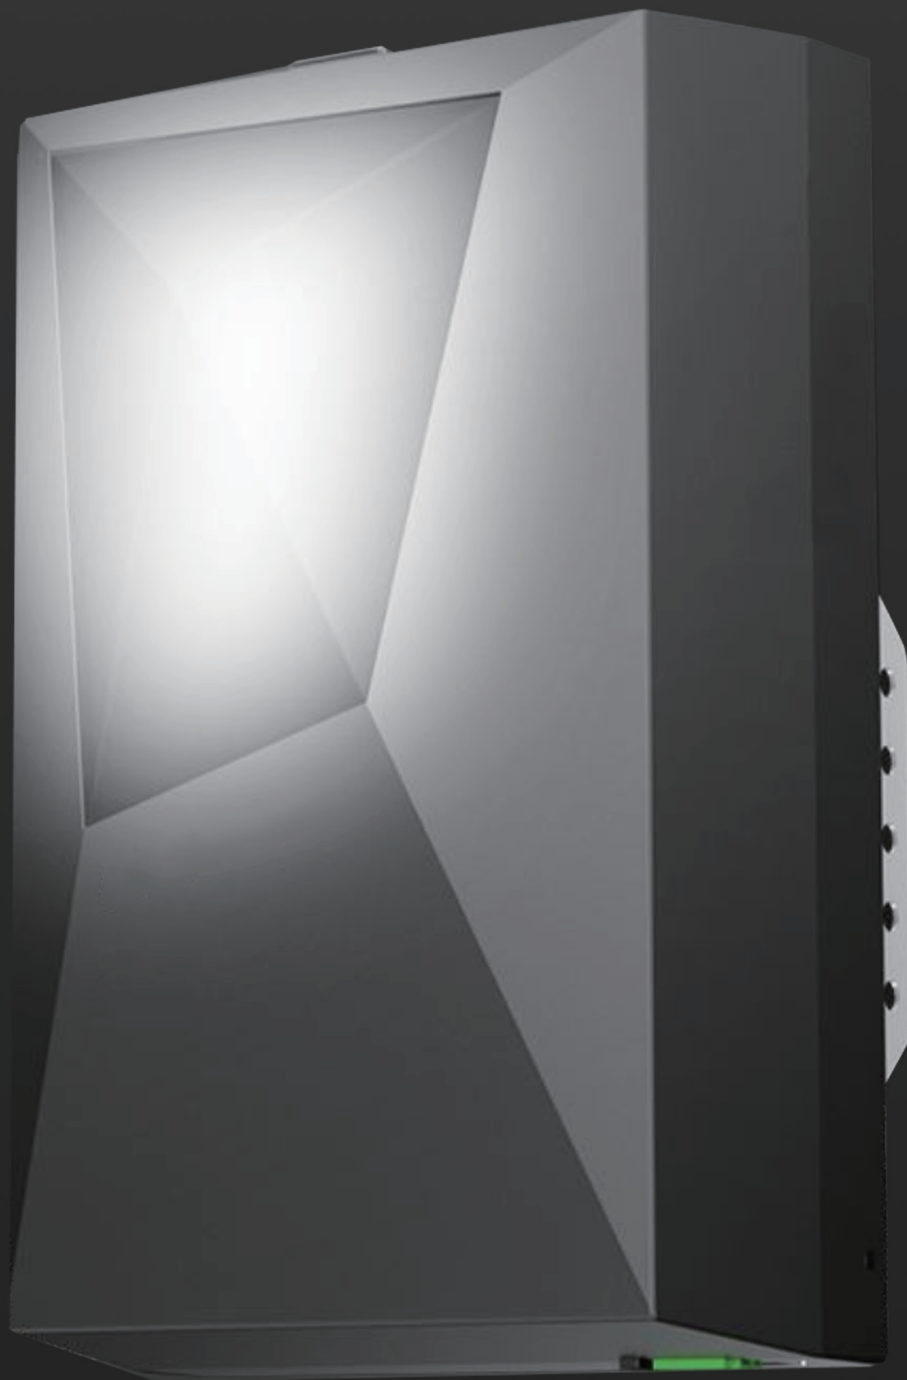

E-GDO-1000 MANUAL

AUTOMATION FOR ROLLER AND UP-AND-OVER DOORS.

Warning: Please read the manual carefully before installation and use. The installation of your new door opener must be carried out by a technically qualified or licensed person. Attempting to install or repair the door opener without suitable technical qualification may result in severe personal injury, death and/ or property damage.

CONTENTS

Important safety recommendations.....	4
Basic function introduction.....	6
Installation.....	7
Installation(carriage).....	9
Installation (one-piece aluminum track).....	10
Installation (one-piece steel track).....	12
Installation (sectional steel track).....	14
Installation recommendations.....	15
Basic function setting by door opener.....	16
Special function introduction.....	18
Wiring guide.....	21
Manual disengagement.....	21
Maintenance.....	22
Manufacturer's Declaration.....	22
Final notes.....	22
Technical specifications.....	23
Standard packing list.....	23
General Error Code.....	24
GDO WiFi Connection Manual.....	25
App Instructions.....	25

Important safety recommendations

The GDO features a modern design, showcasing the latest innovations, complete with simplified installation and comprehensive safety functions.

Safety Warnings

Warning: It is very important to read these safety warnings and follow all instructions before installing. Or it may cause serious personal injury and/or property loss. Save these instructions

1. This appliance is suitable for use by children 8 years or older, and individuals with limited physical, sensory, or mental capabilities; provided they are supervised and understand the hazards involved. Children shall not play with the appliance or its controls, including transmitters. Keep the transmitters out of the reach of children. Cleaning and user maintenance shall not be made by children without adult supervision.
2. We strongly recommend installing photocell to increase safety protection and physical security.
3. Before installing the drive, remove all unnecessary ropes or chains and disable any equipment, such as locks, not needed for powered operation. Check that the door is in good mechanical condition correctly balanced and opens and closes properly.
4. A-weighted emission sound pressure level of the drive $L_{pA} \leq 70$ dB(A).
5. The operator must not be used for doors without a safety catch.
6. Install the actuating member for the manual release at a height less than 1,8 m. If removable, the actuating member should be stored in direct vicinity of the door.
7. Install any fixed control at a height of at least 1.5 m and within sight of the door but away from moving parts.
8. Wall switch or wall transmitter must be installed out of the reach of children.
9. Permanently fix the labels warning against entrapment in a prominent place or near any fixed controls.
10. Permanently fix the label concerning the manual release adjacent to its actuating member.
11. After installation, ensure that the mechanism is properly adjusted and that the drive reverses or the object can be freed when the door contacts a 50 mm high object placed on the floor. Ensure that parts of the door do not extend over public footpaths or roads.
12. Refer to pages 4-8 for information on how to adjust the door and drive.
13. Connect the GDO to 230-240V circuit, and fix it to the required place by professional person.

WARNING: The drive shall be disconnected from its power source during cleaning, maintenance and when replacing parts.



14. ■■■ Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

15. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

16. Watch the moving door and keep people away until the door is completely opened or closed.

17. Take care when operating the manual release since an open door may fall rapidly due to weak or broken springs, or being out of balance.

18. Check the condition of the door frequently if has any damage or if is well balanced, especially the cable, spring, components connect with the wall. Don't use the door if it is not repaired or adjusted, or there will be injury due to improper installation or bad balance. If the door components are under extreme pressure, don't repair it by yourself, if necessary, call for authorized service.

19. Each month check that the drive reverses or the object can be freed when the door contacts a 50mm high object placed on the floor.

20. The drive must not be used with a door incorporating a wicket door (unless the drive can not be operated with the wicket door not put in the safe position). If applicable, that the drive is not to be used with doors having openings exceeding 50mm in diameter or having edges or protruding parts a person could grip or stand on.

21. Don't open/close the door when people are near the door. Keep children away from the moving door. Or it may cause serious personal injury and/or property loss.

22. In order to keep the GDO away from the rain, don't expose it out door. Don't put the GDO in the water, don't spray water to the GDO, keep the GDO away from any other device with water.

23. In order to make sure the GDO can sense the obstacle under the door, the door must press the obstacle. So it may cause injury or damage to the obstacle, door or person.

24. If the circuit is damaged, the professional person is required to do the repair.

25. Make sure the garage door is fully open & stationary before passing through the door. Make sure the garage door is fully closed & stationary before leaving.

The device is intended for the opening and closing of tilt-up and sectional garage doors in the private sector.

For 1000N, it is the best for the door less than 14m², 140kgs.

The device is not meant for commercial use but solely for the use in private garage doors that are appropriate for a single household. The device is installed indoor and max 2,5m away the door, and min 0,5m away the ceiling of garage. Check the Installation instruction for details. Any improper use of the drive could increase the risk of accidents.

Basic Function Introduction

- 1. Soft start, soft stop** - Minimize start-up load on garage door opener and garage door.
- 2. Auto reverse** - The door will stop during opening when contacting obstruction, and will reverse at least 30cm during closing when contacting obstruction.
- 3. Dynamically force self-learning** - It can make sure the garage door driver will work steadily in spite of change of door resistance by seasonal variation.
- 4. Auto reverse force adjustable** - With a wide range, sensitive and reliable.
- 5. Over-loading force detecting** - The door will reverse more than 15 cm automatically when it is overloaded when closing and will stop when it is overloaded when opening.
- 6. High-voltage/Low-voltage protection** - The process will not perform any action of opening and closing when voltage is too low or too high, door panel and controller won't be damaged.
- 7. Rolling code transmitter** - With billions of codes, won't be coincident code or pirated code.
- 8. Auto-close function**
- 9. Remote lock-out function**
- 10. Partial-opening function**
- 11. Vacation Mode**
- 12. Door open only mode**
- 13. Light color and party Mode** (optional, it is mandatory to equip with light bars)
- 14. Backup battery output terminal**
- 15. Wall switch (Push button) output terminal**
- 16. Photo beam output terminal**
- 17. Flash light output terminal**
- 18. Pass door protection output terminal**
- 19. External receiver output terminal**

Installation

- 1).** Read the instructions carefully.
- 2).** Make sure the door structure is solid and suitable to motor driven.
- 3).** Make sure that when the door is moving there are no friction points.
- 4).** The door must be properly balanced and must be easily lowered and raised by hand.
- 5).** Install a 230-240V adequately protected 3-pin socket near where the GDO is going to be installed.

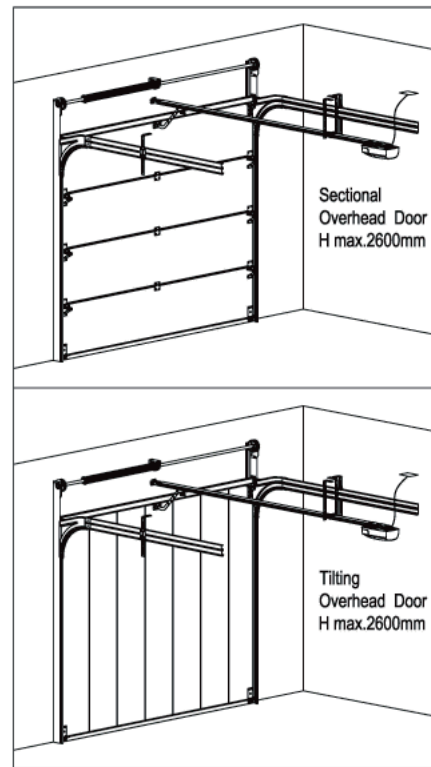


Fig.1

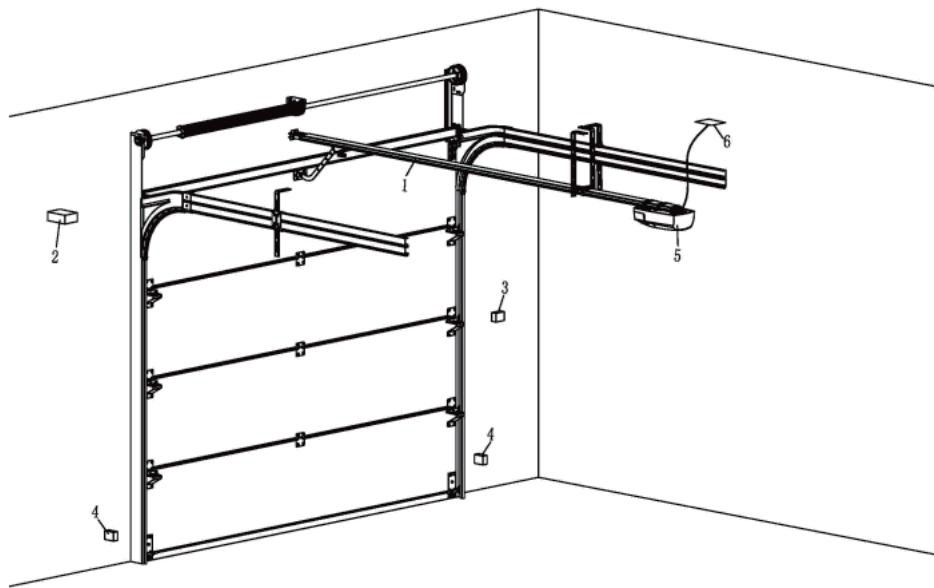


Fig.2

Referring to Fig. 2 for recommended installation

- 1)** Opener track
- 2)** 24V DC flashing light (optional extra)
- 3)** Push button (optional extra)
- 4)** Photo beam (optional extra)
- 5)** Opener
- 6)** Power socket

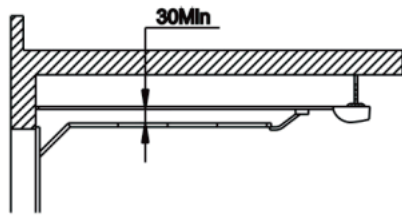


Fig. 3

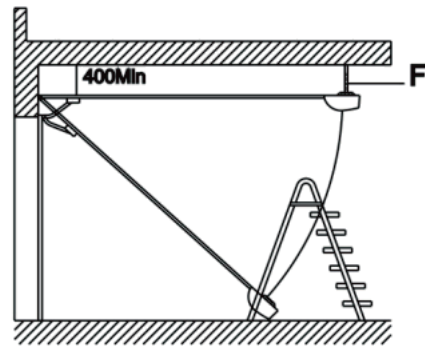


Fig. 4


Maintain a minimum gap of 30mm from the top panel's maximum height (Fig. 3). Make sure the track is horizontal and vertical to the shaft. Make sure the connection of hanging bracket F and ceiling is firm enough (Fig. 4).

Warning: Make sure the opener is affixed to noggins in ceiling and not to plasterboard. Failure to have a safe and secure fixing will lead to opener falling, and cause serious persons and /or property damage.


INSTALLATION INSTRUCTION
FOR CARRIAGE OF STEEL RAIL

Before installing the door motor in the rail , install the carriage in the rail , slide it as shown in the picture(this carriage is in the door motor box)


1

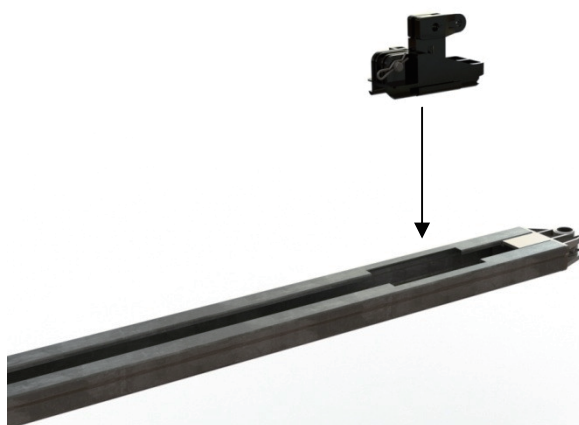


2

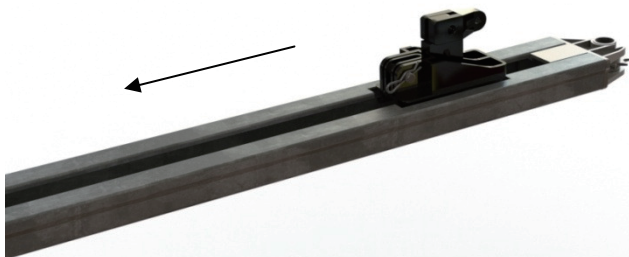


3

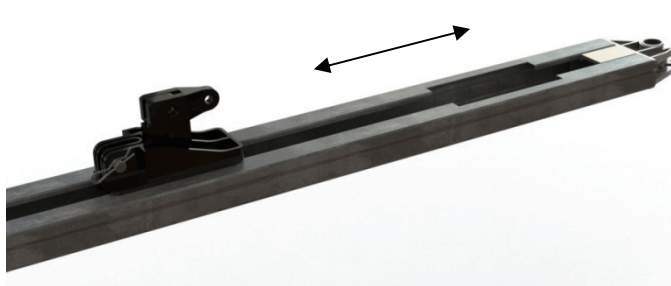

4

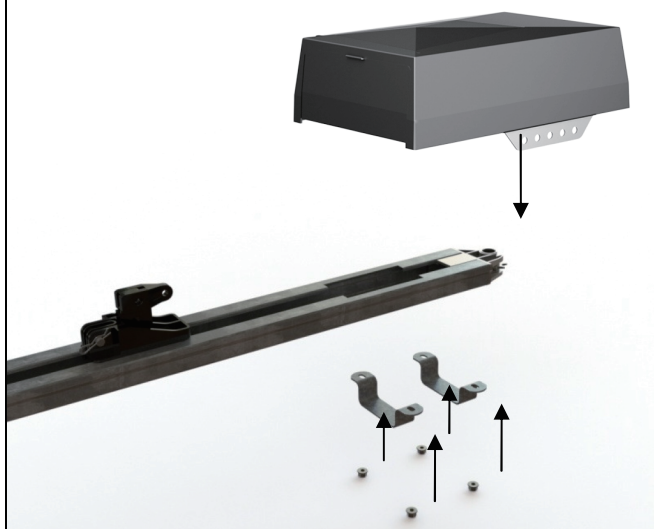

5

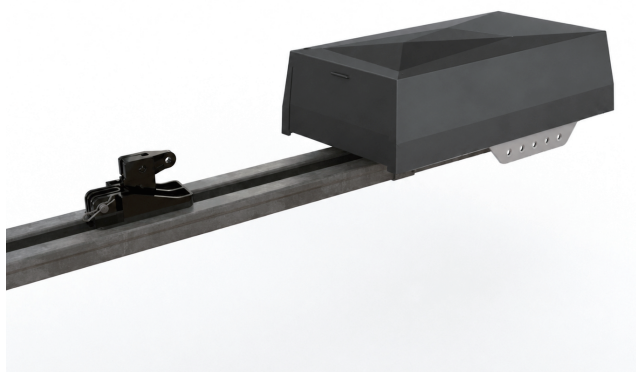

Installation (one-piece aluminum track)

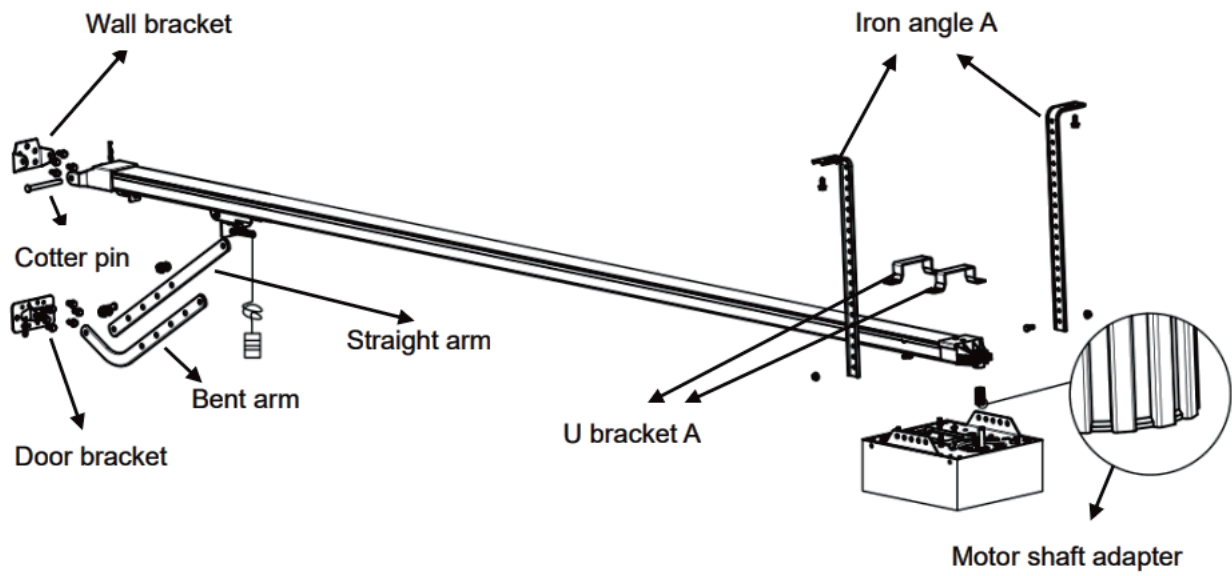


Fig.5

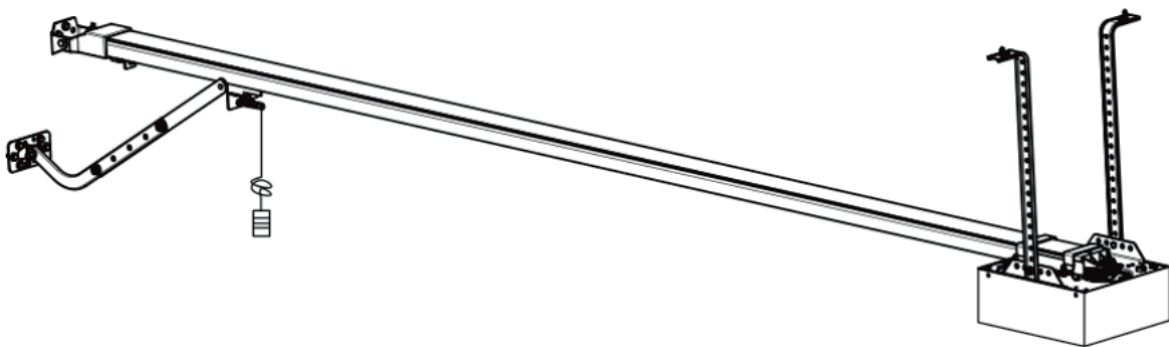


Fig.6

Installation procedure

1. Fixing the wall bracket to the wall 2cm-15cm over the shaft or intermediate bracket (depend on the actual installation space).
2. Fixing the steel track to the wall bracket with cotter pin.
3. Sleeve the motor shaft adapter to the motor shaft according to Fig. 5. Notice: the flanged end facing down.
4. Fixing garage door opener to the track by U bracket A. Fasteners must be torqued to a maximum of 2Nm.
5. Fixing the iron angle A to wings of garage door opener base plate, hanging the track to ceiling by iron angle A. Notice: Make sure the connection of iron angle A and ceiling is firm enough. Make sure the track is horizontal and vertical to the shaft.
6. Fixing the door bracket on the door panel, fixing the straight arm and bent arm, fixing the clutch cord.
7. Release the clutch, try to open and close the door by hand. Make sure there is no resistance between door panel and track.
8. Connecting the opener with power and adjusting the operation.

Notice: Make sure the opener's voltage is in accordance with the local voltage. Connect the opener to a properly earthed power supply.

Installation (one-piece steel track)

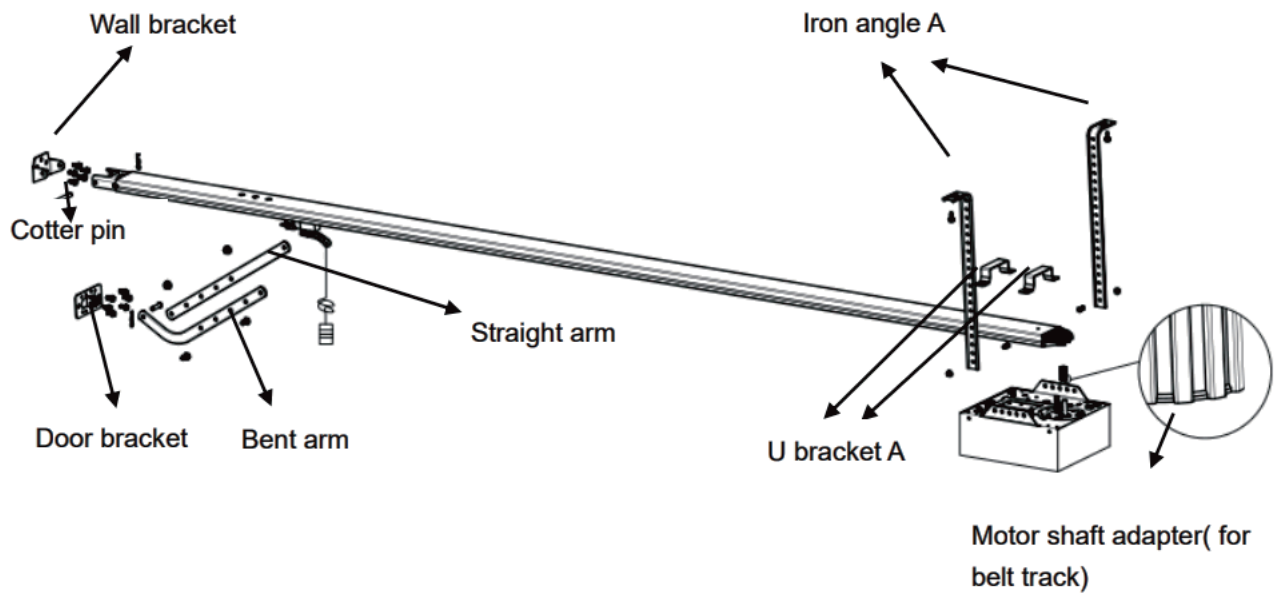


Fig. 7



Fig. 8


Installation procedure

1. Fixing the wall bracket to the wall 2cm-15cm over the shaft or intermediate bracket (depend on the actual installation space).
2. Fixing the steel track to the wall bracket with cotter pin. If the track is with belt, then go for step 3, if track is with chain, then skip to step 4.
3. Sleeve the motor shaft adapter to the motor shaft according to Fig. 7 Notice: the flanged end facing down.
4. Fixing garage door opener to the track by U bracket A. Fasteners must be torqued to a maximum of 2Nm.
5. Fixing angle A to base plate of garage door opener, hanging the track to ceiling by iron angle A. Make sure the connection of iron angle A and ceiling is firm enough.
6. Fixing the door bracket on the door panel, fixing the straight arm and bent arm, fixing the clutch cord.
7. Release the clutch, try to open and close the door by hand. Make sure there is no resistance between door panel and track.
8. Connecting the opener with power and adjusting the operation.

Notice: Make sure the opener's voltage is in accordance with the local voltage. Connect the opener to a properly earthed power supply.

Installation (sectional steel track)


1. Cut the plastic cable tie on the first

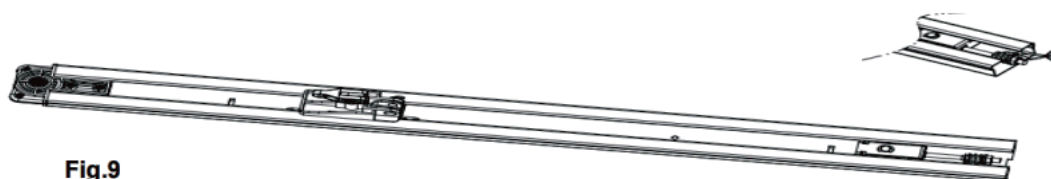

2. Fix the first sleeve to the first piece track



3. Fix the second piece track to another end of first sleeve

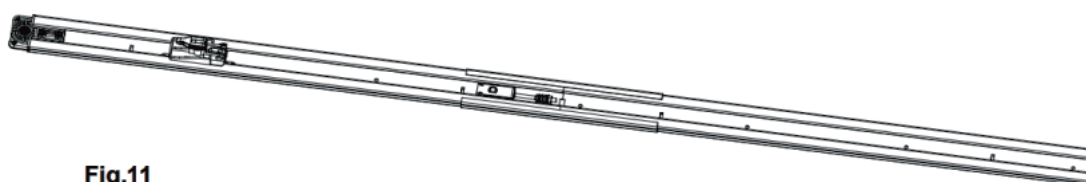

4. Repeat above steps to fix the second sleeve, third piece track



5. Pull the rod along the track towards another end



6. Fix rod according to below picture



7. Install according Fig. 7

Installation recommendations

Important notice: It is the responsibility of the installer/ and / or commissioning body to ensure full compliance to all local laws, regulations and guidelines. The specific standards detailed within this instruction manual are not exhaustive of all local laws, regulations and guidelines. All installation procedures are to be followed regarding the safety rules of electrical installations and automatic gates and doors.

1. Before installing check the surrounding environment. Carefully evaluate any hazards which could be physical damage (transiting vehicles, parts of trees falling etc.), possible contact with persons' bodies (insects, leaves, etc.), flooding hazards, or any other exceptional events.
2. Check the main voltage numbers is the same as the numbers that are given on the rating plate and in this manual.
3. Check and make sure if there is suitable electrical protection against short circuits/power spikes and proper earthing on the main supply. Remember the unit having main voltage running through it (electrocution hazard, fire hazard).
4. Take care with the control unit; the parts may be subject to damage if the control unit is abused.
5. Make sure that you have all the necessary materials, and they are suitable for this kind of use.
6. Read all the instructions thoroughly, and make sure they are understood before attempting to install the opener.
7. Before starting the installation carefully analyse all the risks relating to automating the door. Verify that the door is automated in a sound condition and that the mechanisms are in good working order. Observe the safety margins and minimum distances.
8. Carefully evaluate the safety devices to be installed and the right place to install them; always install an emergency stop device for power interruption to the opener if it is required.
9. Once the risks have been analysed, install the opener and relative safety devices, emergency stop and/or photoelectric cells.


Important note: As for additional safety rules, we strongly recommends the fitting of Photo Electric safety beams on all installations.

10. During the installation process, ensure all instructions within this instruction manual are adhered to. If there are any concerns or questions surrounding installation, please contact our technical department for further guidance.

Basic function setting by door opener

(You also could use App to set all functionalities as well)

1. Limit setting Opening & closing force dynamically self-learning

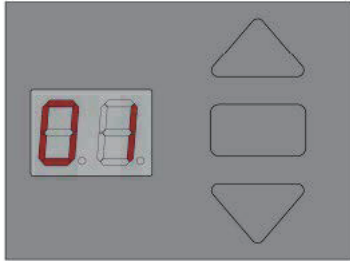

Press 'SET' button and hold on until the LED displays figure '01', then adjust the up limit by pressing 'up' button. Fine-tuning 'UP' or 'DOWN' button to determine the final up limit position then press 'SET' button the display turn into '02' automatically. Adjust the down limit by pressing 'down' button. Fine-tuning 'UP' or 'DOWN' button to determine the final down limit position then press 'SET' button. The opener will operate a cycle automatically to remember the limit positions and the opening & closing force.



The '-' on the display means the opener doesn't have travel limit setting.

The 'F F' on the display means the opener completing the travel limit setting.

2. Matching the receiver and transmitter

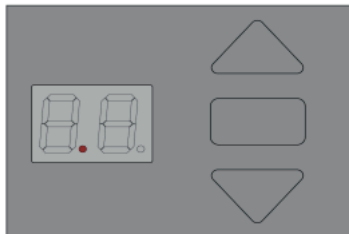


Fig. A

Press 'UP' button and hold on until the LED dot flashes. (Fig.A) Then press any button on the transmitter twice, the dot will flash quickly and be off shortly, the transmitter coding is successful. It will be able to control the open, close, stop of the garage door driver.

Press 'UP' button more than 8 seconds (the LED dot flashes) until the LED displays '00', all the stored codes will be deleted.

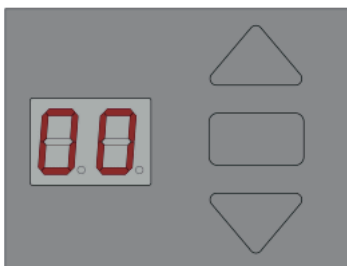


Fig. B


3. Safety reverse force adjustment



Press 'SET' button and hold on until the LED displays '03'. It's under force adjustment mode. LED shows the current force level. Press 'UP' button to increase the force level and 'DOWN' button to decrease the force level.

Notice: Maximum force level is 09, minimum is 01. Please make sure the photo beam is connected and can work properly before you choose level 04 - 09. If not, you can only choose 01 - 03.

4. Auto-close setting

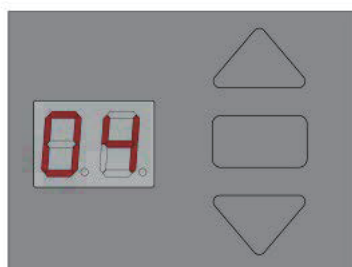

Press the 'SET' button and hold it until the LED shows the figure '04'. Press the 'UP' button to increase the auto close time. Press the 'DOWN' button to decrease the auto close time. Press the 'SET' button to confirm the settings. When the auto close function is activated, the fully opened door will automatically close after the set time. The auto close function will be disabled when the LED shows 0.

The number 1 = 10 seconds, 2 = 20 seconds, 3=30 seconds... the maximum number is 54 = 540 seconds.

Notice: You need to install the photo beam and activate it first. Otherwise, automatic closing cannot be set.

5. Photo beam setting




Press 'SET' button and hold on until the LED displays figure '05'. Press 'UP' button the LED displays '1', photo beam function is available. Press 'DOWN' button the LED displays '0' to cancel this function. Press 'SET' to confirm the setting.

Make sure that the connected infrared sensor is controlled by pulse control photo beam, and wiring as Fig. 15


Notice: If photo beam function is activated, while the photo beam is not connected, the door will not close.

6. WiFi Setting

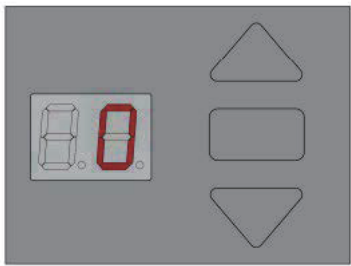

Press 'DOWN' button and hold on until the LED displays figure '0', Press 'UP' button to choose the setting: '1' means entering into WiFi connecting mode, Press the 'SET' to start the WiFi connecting.

'2' means WiFi reset. Press 'SET' to confirm the reset is done. All connected devices are deleted.

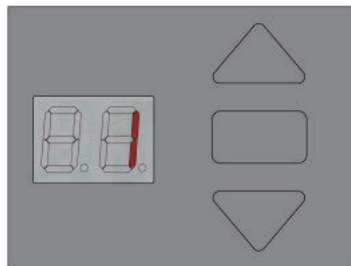

For detailed instructions, please refer to the WiFi instruction manual.

Special function introduction

The following functions are made to order in accordance with the special needs of customers.

1. Partial opening function




Press and hold 'UP' and 'DOWN' together until the LED displays figure '06', then press 'SET', press 'UP' or 'DOWN' button to increase or decrease the partial opening height. The number 1 means 10cm, the number 2 means 20cm, the number 3 means 30cm... the number 20 means 200cm and so on. Press 'SET' to confirm the setting.

The LED displays '0', the partial opening function is off;


The partial opening distance can't be higher than the full opening distance.

2. Lock button on transmitter

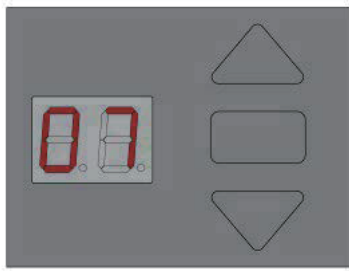

Press and hold 'UP' and 'DOWN' together until the LED displays figure '06', then press 'UP', the LED displays figure '07', press 'SET' to confirm the lock button setting mode. Then press 'UP' button, the LED displays '1', the lock button is available. Press 'DOWN' button, the LED displays '0', the lock button has been turned off. Press 'SET' to confirm.

After setting, the coded button on transmitter will be disabled after 5 seconds when door is fully closed. Press unlock button on the transmitter firstly, and press the coded button to control the door opener.

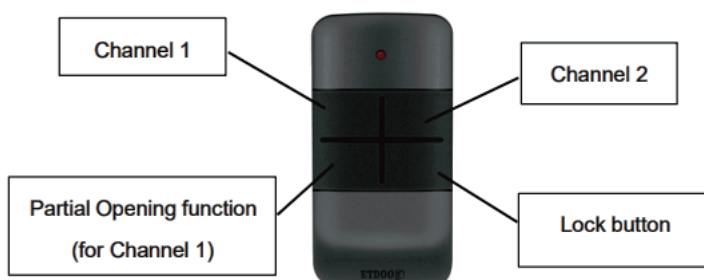

3. Flash light function

There are corresponding interfaces for this function and provide 24V-35V flash light voltage. Connect the flash light with DC 24V, current $\leq 200\text{mA}$ (Fig.18). When use AC230V power flash lights, please match an adapter, and wiring as required (Fig.19).

4. Pass door (SD) protection

This function ensures that the door can't be opened unless the small pass door is closed. The door panel won't be damaged. Connect according to Fig.17.


5. Door open only mode



Press and hold 'UP' and 'DOWN' together until the LED displays figure '06', then press 'UP' until the LED displays figure '08', press 'SET' to confirm the door open only mode.

Then press 'UP' button, the LED displays '1', this mode is available. Press 'DOWN' button, the LED displays '0', the mode has been turned off. Press 'SET' to confirm.


6. Light bar function

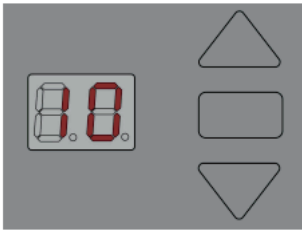

Press and hold 'UP' and 'DOWN' together until the LED displays figure '06', then press 'UP' until the LED displays figure '10'. press 'SET' to confirm the mode. The LED displays 'L1'. Then press 'UP' button, the LED displays 'L2', And push it again, it displays 'L3'. And soon until displays 'L6'. You can choose any color you need and press 'SET'. Totally six different colors for selecting.

Notice: The function can only be activated when a light bar is installed.


7. Vacation mode

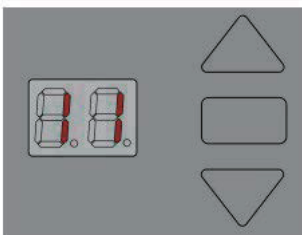

Press and hold 'UP' and 'DOWN' together until the LED displays figure '06', then press 'UP' until the LED displays figure '11'. press 'SET' to confirm the mode. The LED displays '0'. Now, the vacation mode is off. Then press 'UP' button, the LED displays '1', and press 'SET', vacation mode is available.

Notice: Remotes and outdoor keypads cannot open the door when vacation mode is on.



8. Party mode

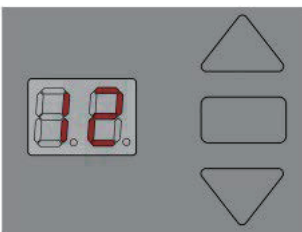

Press and hold 'UP' and 'DOWN' together until the LED displays figure '06', then press 'UP' until the LED displays figure '12'. press 'SET' to confirm the mode. The LED displays '0'. The party mode is off. Then press 'UP' button, the LED displays 'P.1', And push it again, it displays 'P.2'. And so on until displays 'P.3'. There are three party modes. You can choose any mode you need and press 'SET'.

Notice: The function can only be activated when a light bar is installed.

9. Low power mode

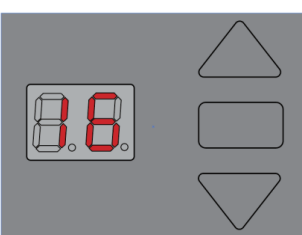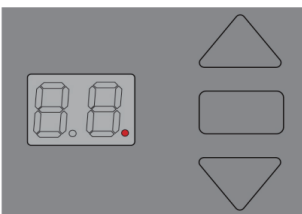

After 3 minutes of standby, the LED will display a '.', indicating that the motor has entered low-power mode.

There is no output for 24V and Flash in the low-power mode.

So an external receiver needs to be manually set to cancel the low-power mode.

Keep pressing the 'UP' and 'DOWN' button until the LED displays '6'. Press the 'UP' key until the LED display '16'. Press the 'SET' key confirm and display '0' which is low-power state.

Press the 'UP' key to '1', then press 'SET' key to confirm to turn off the low-power function. Customers can then use other external devices.

Press the 'Down' key to '0', then press 'Set' key to confirm. it will exit the non-low power mode.

Wiring guide

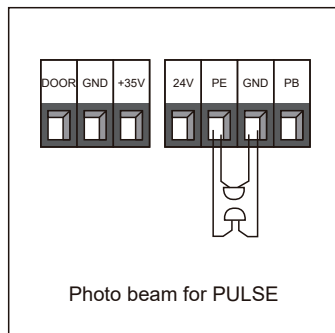


FIG.15

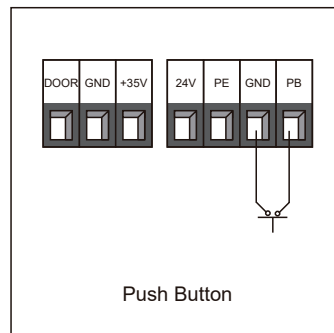


FIG.16

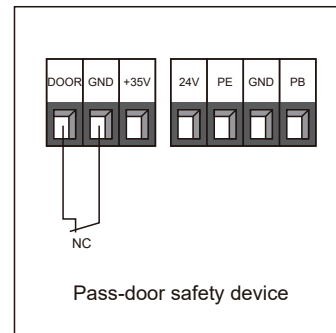


FIG.17

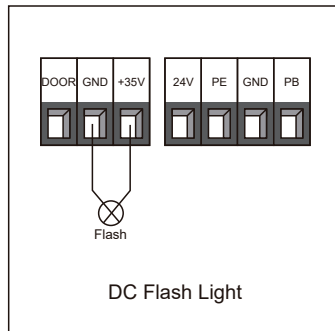


FIG.18

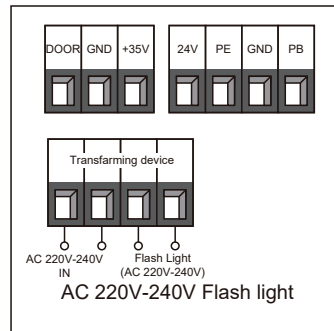


FIG.19

Manual disengagement

The opener is equipped with a manual release cord to disengage shuttle and move door by hand while holding the handle down (Fig.20). Pull on the handle to disengage the shuttle. To re-engage the door simply run opener in automatic mode or move door by hand until the trolley engages in the chain shuttle.

In some situations that a pedestrian door is not in state, it is recommended that an external disengagement device should be fitted (Fig.21)

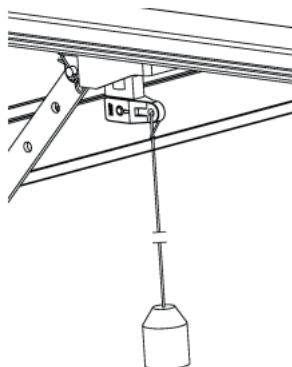


Fig. 20

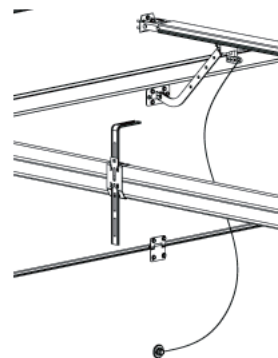


Fig. 21

Maintenance

No particular maintenance is required for the logic circuit board. Check the door at least twice a year to confirm that it is properly balanced and all working parts are in good working condition. Check the reversing sensitivity at least twice a year, and adjust if it is necessary. Make sure that the safety devices are working effectively (photo beams, etc.)

Notice: A poorly operating door can affect the life of the automatic opener due to incorrect loads, and will void the warranty.

Manufacturer's Declaration

We hereby declare that the product of this model corresponds in its design, construction and version to the relevant and basic health and safety requirements of the following EC regulations: EMC Directive and Low Voltage Directive. The detailed standards are as follows:

EN 55014-1, EN 55014-2, EN 61000-3-2, EN 61000-3-3

EN 301 489-1, EN 301 489-3

EN 60335-1, EN 60335-2-95, EN 62233

Final notes

This manual is only used by technical persons who are qualified to carry out the installation. No given information in this manual can be considered of any interest to the end user.

It is important for the installer to show their clients the correct methods of operation of the garage door opener, including the use of manual disengagement cord and all applicable safety checks.

Inform the owner about the need of a regular and accurate maintenance, especially regarding a regular check of the safety and reversing devices.

Technical specifications

Model	1000N
Power Input	245W
Max force	1000N
Door opening size	14m ² ,140kgs
Input Voltage	230-240VAC 50/60Hz
Light time	3 minutes
Working temperature	-20° ~ 55°C
Relative Humidity	<90%
Radio frequency	433.92MHz or other on request
Decoding	Rolling code
Transmitter power	12V Battery
Lamp	LED, 24VDC

Standard packing list

Item	Quantity
Door opener	1
Track (incl. Clutch)	1
Remote control	2
Door bracket	1
Wall bracket	1
“U” bracket A	2
Clutch cord	1
Cord pendant	1
Straight arm	1
Bent arm	1
Fixing kit	1

General Error Code

Code	Failure	Possible causes	Proposed solutions
E0	High/low voltage	1. Insufficient battery voltage 2. The voltage of the socket is too high/too low	1. Replace a new battery 2. Check the voltage of the socket
E1	No signal detected on main hall sensor	1. The door body is blocked or the door body is too heavy 2. The motor is damaged 3. The main Hall is not connected, or the element is damaged, the motor Hall feedback gear or line is abnormal	1. Replace the product with a larger configuration 2. Replace the motor 3. Replace the Hall sensor
E2	No signal detected on sub hall sensor	The sub Hall is not connected, or the element is damaged, or the motor Hall feedback gear is abnormal	1. Replace the motor 2. Replace the Hall sensor
E3	Sub hall and main hall plug error alarm	Main hall sensor and sub hall sensor wire switched	Check the wires of main hall sensor and sub hall sensor
E4	Wicket door terminal open circuit	1. Wicket door is open 2. Wicket door detection circuit is abnormal	1. Close the wicket door 2. Short-circuit the wicket door and inspect signal terminal
E5	Motor model unknown	Abnormal motor gear	Replace motor gear
E6	Door blocked during opening	1. The door is too heavy 2. The resistance detection circuit is abnormal	1. Replace larger configuration product 2. Replace the main board 3. Check the condition of the door
E7	Motor overcurrent	PCBA broken	Replace with a new PCBA
E8	The current of the main line is too low	The current input voltage is too low	1. Check the voltage of the socket 2. The door is too heavy, or the track is abnormal 3. Replace the battery with a new one
E9	Motor blocked	current is too large caused by continuous working	Check the motor for damage

GDO WiFi Connection Manual

Read First

Before WiFi function can be activated, the garage door opener opening and closing position must have been set. **1.** Ensure your router, smart phone and device are as close as possible. Make sure that your WiFi has a 2.4G network enabled and turn on the blue-tooth. **2.** Only one user account can be used to control the garage door opener. Make sure the garage door opener has not been previously connected to another account. But please notice that the main account can invite your family members in the app to control it.

Please do Reset Garage Door Opener before the below instructions.

Press “DOWN” button in the opener and hold until “0” displays on the screen, press “UP” button until “2” displays on the screen, then press “SET” to confirm the reset has done.

Setup

1. Download the “Smart GDO” App to your smart phone via Google play (for android) or App store (for IOS). Or use your smart phone to scan the QR code. Press the right top corner, to open with browser to download the app.

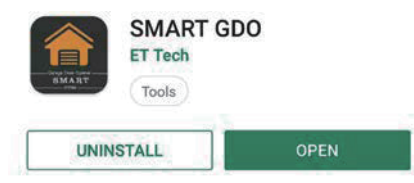


FIG.1



FIG.2



FIG.3

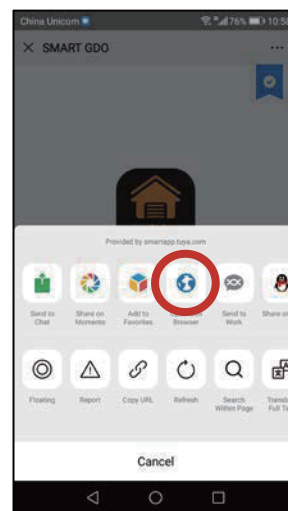


FIG.4

2. Open the App and create a new account according to the instructions. If you already have an account, log in directly.

- 1) Click the “Register” button
- 2) Fill in your mobile number
- 3) Click the “Get verification code” button
- 4) Fill in your received code from your mobile phone
- 5) Set password

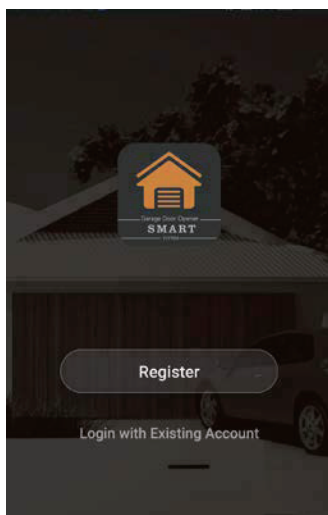


FIG.5

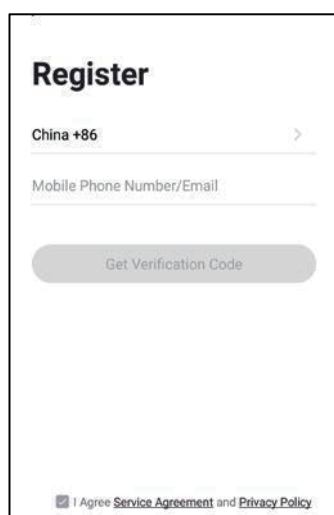


FIG.6

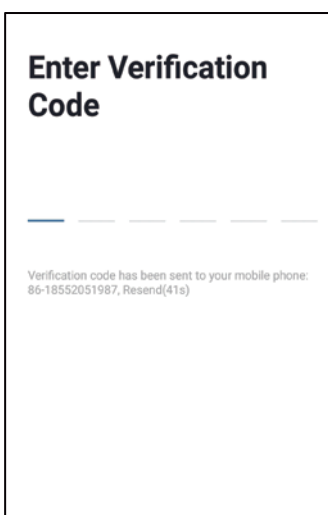


FIG.7

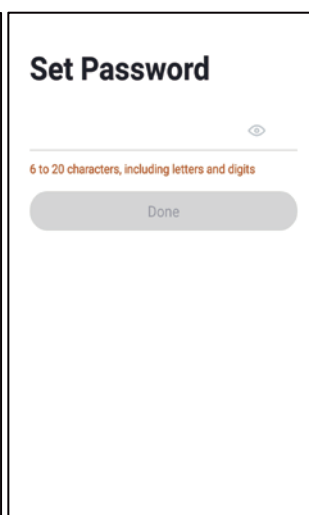


FIG.8

3. Click “Add Device” and choose “Garage”, then click “Confirm indicator rapidly blink” button.

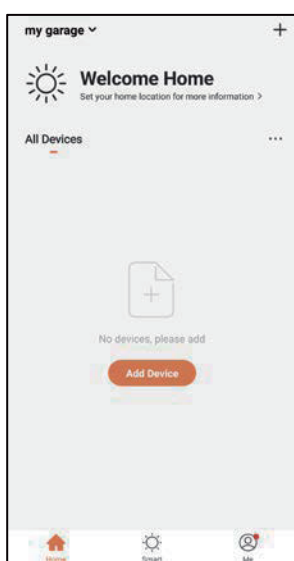


FIG.9



FIG.10

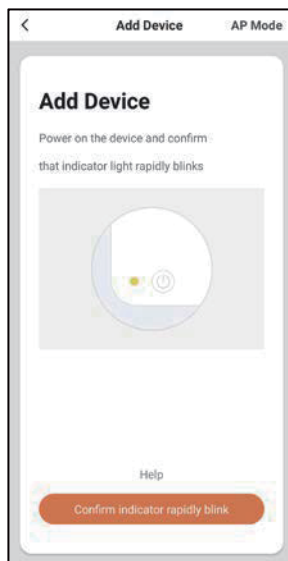


FIG.11

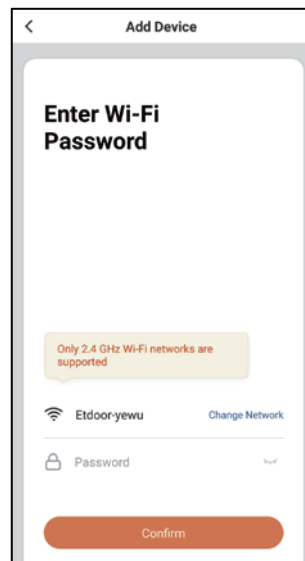


FIG.12

4. Choose the appropriate WiFi network, enter the password, and please don't press “Confirm” until you finish below step 5.

5. Garage door opener WiFi setting

Press ‘DOWN’ button on the garage door opener and hold on until the LED displays figure ‘0’ (see FIG 13), Press ‘UP’ button to choose the setting. ‘1’ means entering into WIFI connecting mode (see FIG 14). ‘2’ means WIFI reset. Press ‘SET’ to start the WIFI connecting. Then “FF.” displays on the screen and “.” will keep blinking, the garage door opener is connecting with WiFi.

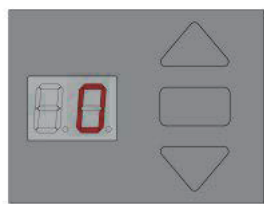


FIG.13

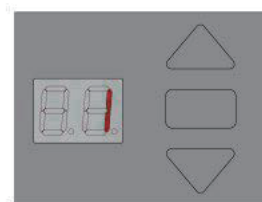


FIG.14

6. Click the “Confirm” button (see FIG 15) in the app. The opener will then connect to your network (see FIG 16).

This may take up to 2 minutes. After connecting successfully, click “Done” (see FIG 17). Only one account can be linked to the opener.

If connection fails (see FIG 18), repeat the above steps to retry.

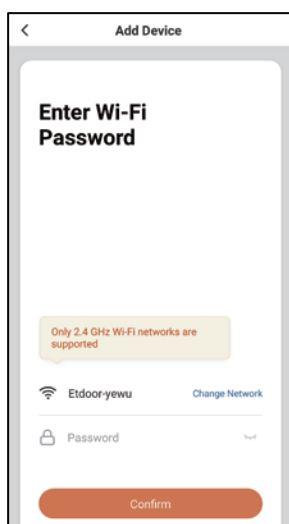


FIG.15

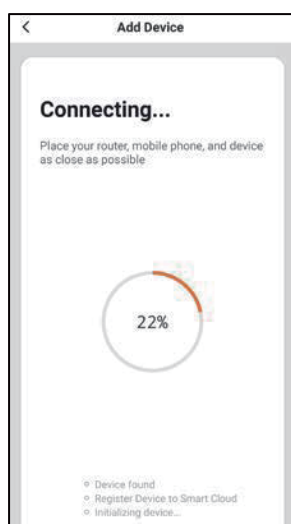


FIG.16

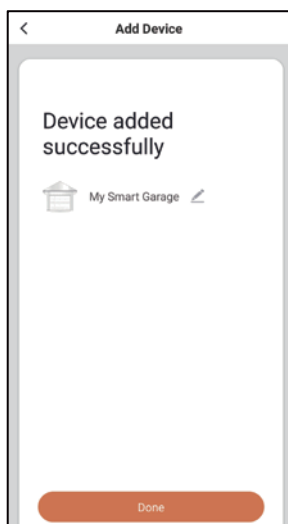


FIG.17

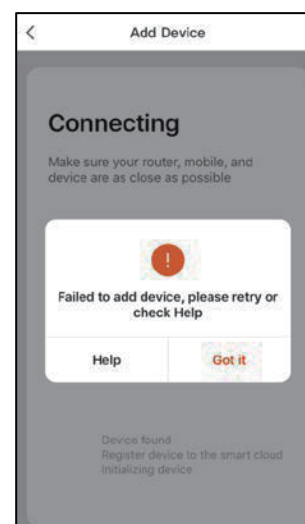


FIG.18

Option 1: Remove Device from App

Click “Remove Device” to delete the opener information in your original account within your app, keep the garage door opener powered on and WiFi connected and then re-connect the opener in the new account step by step.

Option 2: Reset Garage Door Opener

If there is no network, restore the factory settings on garage door opener. Press “DOWN” button in the opener and hold until “0” displays on the screen, press “UP” button until “2” displays on the screen, then press “SET” to confirm the reset has done. All the connected devices are deleted.



ELLARD

Motors & Controls for Garage Doors

Ellard House, Floats Road,
Manchester M23 9WB