

50SERIES Motors

Quick & easy instructions for **battery-powered** 50SERIES motors

Setting up your blind motor

Setting	Steps
Pairing a handset to your motor	1. On the motor hold down P1 button for 2s, the motor will jog and beep. 2. On the handset hold the Stop button for 2s, the motor will jog x 2 and beep x 3.
Setting the upper & lower travel limits	Setting the Upper limit 1. On the handset press the Up button to the limit you require. 2. Hold down the Up & Stop for 2s, the motor will jog x 2 and beep x 3.
	Setting the Lower limit 1. On the handset press the Down button to the limit you require. 2. Hold down the Down & Stop for 2s, the motor will jog x 2 and beep x 3.

*** If the direction of the motor is running the wrong way, you will need to Switch the motor direction.**

Other features

Setting	Steps
Switching motor direction	1. On the handset hold down the Up and Down button at the same time for 2s, the motor will jog x 1.

Setting**Steps****Add / remove a preferred position****Set the blind to the Preferred Position**

1. Remove the back of the handset.
2. Press the P2 Button the motor will jog x 1 and beep x 1.
3. Press the Stop button the motor will jog x 1 and beep x 1.
4. Press the Stop button the motor will jog x 2 and beep x 3.
5. Press Stop button for 2s, the motor will move to the preferred position.

To Remove

1. Repeat the above instructions.

Jog Mode & Running Mode switch

1. On the handset press and hold the Up & Down button for 5s, the motor will jog x 1.
2. Press the Stop button the motor will jog x 1.

To Remove

1. Repeat the above instructions.

Adjust limits**Adjust the Upper Limit**

1. On the Handset press and hold the Up & Stop button for 5s, the motor will jog x1 and beep x 1.

Move the blind to the new limit

2. Hold down the Up & Stop for 2s, the motor will jog x 2 and beep x 3.

Adjust the Lower Limit

1. On the Handset press and hold the Down & Stop button for 5s, the motor will jog x1 and beep x 1.

Move the blind to the new limit

2. Hold down the Down & Stop for 2s, the motor will jog x 2 and beep x 3.

Pair / unpair additional handsets**Method 1**

1. Remove the back of the handset.
2. On the existing handset press the P2 button, the motor will jog x 1 and beep x 1.
3. On the existing handset press the P2 button, the motor will jog x 1 and beep x 1.
4. On the new handset press the P2 button the motor will jog x 2 and beep x 3.

To Remove

1. Repeat the above instructions.

Setting**Steps****Pair / unpair additional handsets****Method 2**

1. Remove the back of the handset.
2. On the existing handset press the P2 button, the motor will jog x 1 and beep x 1.
3. On the existing handset press the P2 button, the motor will jog x 1 and beep x 1
4. On the new handset press Stop for 2s, the motor will jog x 2 and beep x 3.

To Remove

1. Repeat the above instructions.

Method 3

1. On the motor press the P1 button for 2s, the motor will jog x 1 and beep x 1.
2. On the new handset press Stop button for 2s, the motor will jog x 2 and beep x 3.

To Remove

1. Repeat the above instructions.

Speed regulation / setting motor Slow Stop Operation Mode.**Speed Up**

1. Remove the back of the handset.
2. Press the P2 button and the motor will jog x 1 and beep x 1.
3. Press Up button and the motor will jog x1 and beep x 1.
4. Press Up button and the motor will jog x 2 and beep x1.

Reduce the Speed

5. Remove the back of the handset.
6. Press the P2 button and the motor will jog x 1 and beep x 1.
7. Press Down button and the motor will jog x 1 and beep x 1.
8. Press Down button and the motor will jog x 2 and beep x1.

Factory Setting

1. Press and hold the P1 button, the motor will jog x 4 and beep.

Sleep Mode / remove Sleep Mode

1. Press and hold the P1 button for 6s, the motor will Jog x 2 and beep.

To Remove

1. Press the P1 button Once.

Lifting capacity of the motors

Motor Type	Nm	
50SERIES (BM35.3030)	6Nm	25kg

Handsets

- BMTR.9050 & BMTR.9070 Single Channel.
- BMTR.9055 & BMTR.9075 15 Channel.

Setting	Steps
Set Number of Channels	1. Press and hold Channel + & channel – at the same time until “C” (for change) will be displayed on the screen. 2. Press Channel + or channel – to select the max number of channels you need to your remote. 3. Press the Stop button, “o” (for ok) will be displayed on the screen. 4. Handset will now only show that number of channels.
Switch Between One-way & Two-way Mode	Remote default is two-way (Bi- Directional) 1. Remove the back of the handset. 2. Remove the battery. 3. Press and hold the P2 button, while putting the battery back in. For step 3, try to hold the handset with the screen facing you. - If “1” is displayed = one-way. - If “2” is displayed = two-way.
Locking/Unlocking Handset	Once you have done the installation, you may want to lock your handset to avoid any mishandling by the user. 1. Press & hold the Stop button until “l” (for locked) or “U” (for unlocked) is displayed on the screen. 2. Press the Stop button, “o” (for ok) will be displayed on the screen. 3. Handset is now locked or unlocked.


Troubleshooting

Issues	Possible Causes	Solution
The Motor has no response	Battery in motor is depleted.	Recharge with compatible charger.
	Power failure or incorrect connection.	Double check power and cable connections.
	Handset battery is low capacity.	Replace battery.
	Radio interference / shielding.	Check antenna on the motor is intact and not hidden. Check for possible source of radio interference.
	Out of radio control range.	Try control within closer range.
	Motor is blinking red.	Low battery, charge motor.
The handset can't control single motor	Multiple motors are paired to the same channel.	Pair single motor per channel.
		Try to use multi-channel handset to control multi-motors projects, ensure each channel is paired per motor.
Pairing Issues	Remote won't pair with Motor.	Check the remote is compatible with the motor.
		If the motor is a Uni-Directional motor and using Bi-Directional handset you can change the Direction of the motor, see handset instructions.
Problem setting limits	Remote won't set limits.	Handset is not paired to the motor.
		The remote is in locked mode, see handset instructions.
The motor doesn't run or starts to slowly or make loud noise	Connections are incorrect.	Check connections.
	Installation is not correct or overload.	Check installation or overload.
The motor stops during the up and down running.	The motor has reached the lower limit.	Adjust the new limit.
	Running time has exceeded 5/6 minutes.	Let the motor cool down for about 20 minutes.

Deciding the correct Nm and Torque

When choosing the right roller door motor for blinds (or roller shutters), it's important to calculate two key parameters:

1. Torque (in Newton-meters, Nm) – this determines the motor's ability to rotate the blind with enough force.
2. Lifting capacity (usually in kg) – this indicates how much weight the motor can lift, which must match or exceed the weight of your blind.

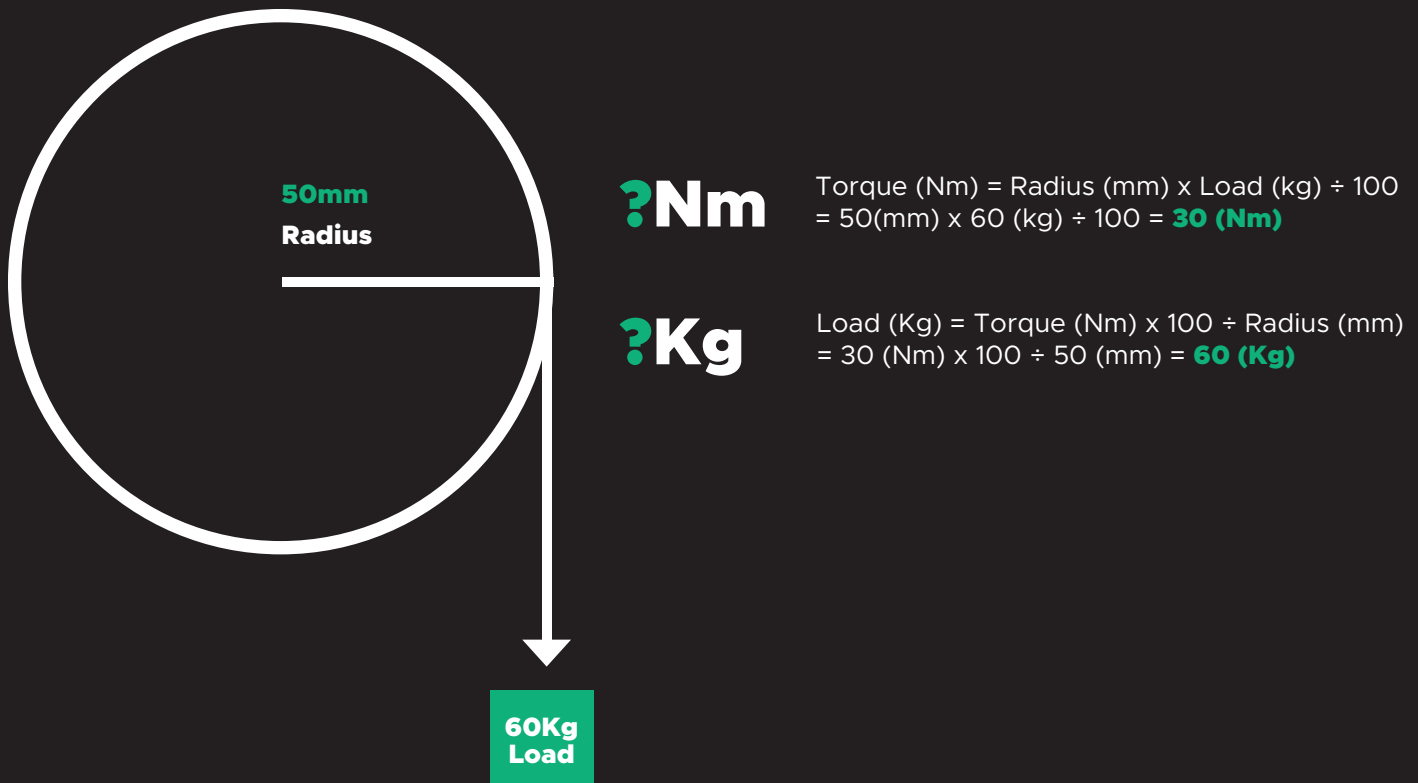

Calculation in diagram based on Newton's Law.
(1 inch = 25.4mm | 1 pound = 0.454Kg)

1. Measure the Load of the Blind (Kg) - You need to know the total weight that the motor must lift. This includes the curtain (slats/material), the bottom bar and any additional accessories mounted on the shaft.
2. Measure the radius of the roller tube (not diameter), in millimetres (mm). This is the distance from the centre of the shaft to the point where the force is applied (typically where the blind rolls onto the shaft).
3. To calculate torque, use the following calculation: Radius x Load ÷ 100 = Torque.
4. To calculate lifting capacity, use the following calculation: Torque x 100 ÷ Radius = Lifting Capacity.